

Attaching the Ferrite Core

You must attach the ferrite core before using the R-4.


If you use a LANC cable to connect the R-4's L connector to a video device that has a LANC connector, you must attach the included ferrite core.

This is for the purpose of preventing electromagnetic noise; do not remove it.


* *The ferrite core is included, but you will need to purchase a LANC cable separately.*

1. Attach the ferrite core to the LANC cable.

* *You must attach it near the plug.*

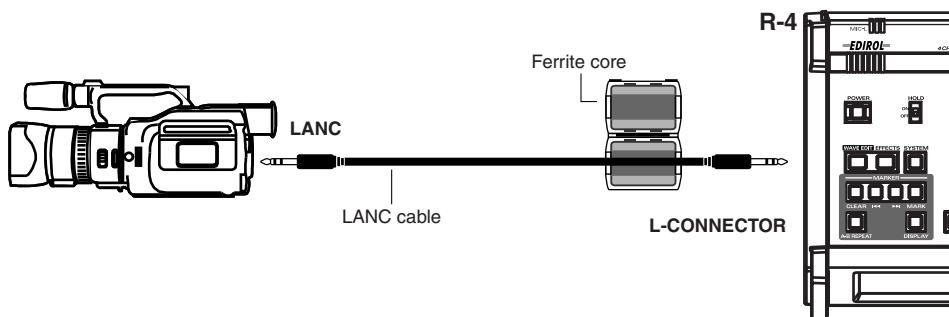

2. Wrap the LANC cable one turn around the ferrite core.

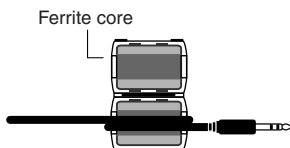

3. Press the halves together until they click shut.



* *Be careful not to pinch your fingers when attaching the ferrite core.*

* *Do not damage the cable by pinching it excessively with the ferrite core.*

Copyright ©2005 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

フェライト・コアの取り付け方


R-4 をお使いになる前に必ずフェライト・コアを取り付けてください。

LANC 端子を装備したビデオ機器と R-4 の L コネクターを LANC ケーブルを使って接続する場合は、付属のフェライト・コアを取り付けてください。
電磁ノイズ防止用ですので取り外さないでください。


※ フェライト・コアは付属していますが、LANC ケーブルは別途ご用意ください。

1. フェライト・コアを LANC ケーブルに取り付けます。

※ 必ず、プラグの間近に取り付けてください。

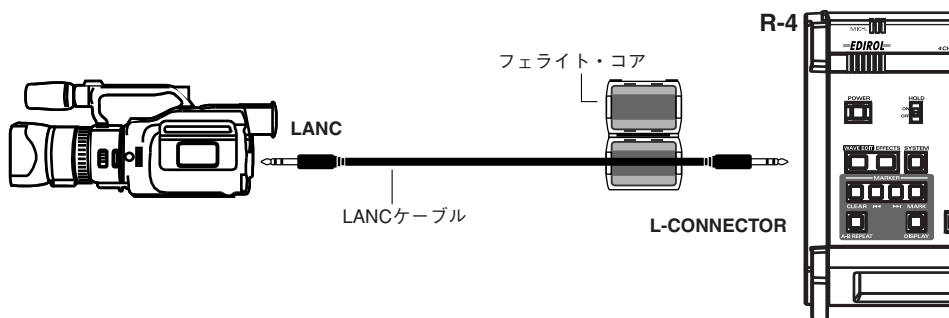

2. LANC ケーブルをフェライト・コアに 1 周巻き付けます。

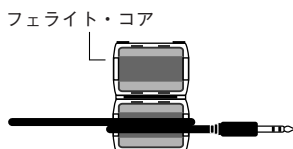

3. カチッと音がするまで押し込みます。



※ フェライト・コアを取り付けるとき、指などを挟まないようご注意ください。

※ フェライト・コアを閉めるとき、ケーブルを無理に挟まないでください。

© 2005 ローランド株式会社

本書の一部、もしくは全部を無断で複写・転載することを禁じます。